

IMS CONNECTOR SYSTEMS GmbH  
 Obere Hauptstrasse 30  
 D-79843 Löffingen  
 Postfach 1141  
 D-79840 Löffingen

Tel (+49) 7654 901-0  
 Fax (+49) 7654 901-199  
 Net: [www.imsconnectors.com](http://www.imsconnectors.com)  
 E-mail: [sales@imsconnectors.com](mailto:sales@imsconnectors.com)

# Assembly Instruction

Number: M-255


Description: Cable jack

Date: 25.04.13

Signature: Á. Varga


Page: 1 of 1

## Using parts:

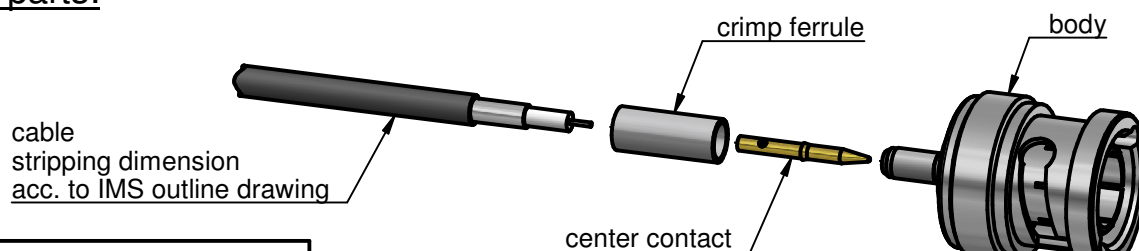

Crimp tool: AGK-4436  
 Assembly aid: AGK-4443


- 1.) Slide the crimp ferrule and the heatsink tube (opt.) onto the cable.

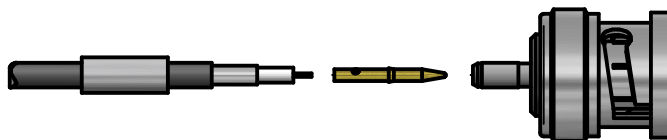

- 2.) Crimp or solder the center contact.



- 3.) Fan the braid and slide the cable into cable plug until stop in the assembly aid.

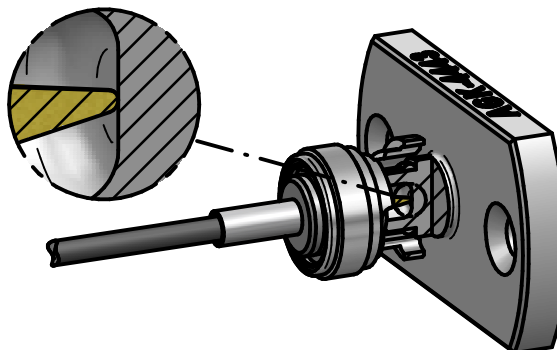

- 4.) Slide the ferrule over the braid, and crimp the ferrule.

