

Assembly Instruction

IMS CONNECTOR SYSTEMS GmbH
 Obere Hauptstrasse 30
 D-79843 Löffingen
 Postfach 1141
 D-79840 Löffingen

Tel (+49) 7654 901-0
 Fax (+49) 7654 901-199
 Net: www.imscs.com
 E-mail: sales@imscs.com

Number: M-185


Date: 14.06.2005

Description: Cable mount plug / jack

Signature: U. Mayer


Page: 1 of 1

Using parts:

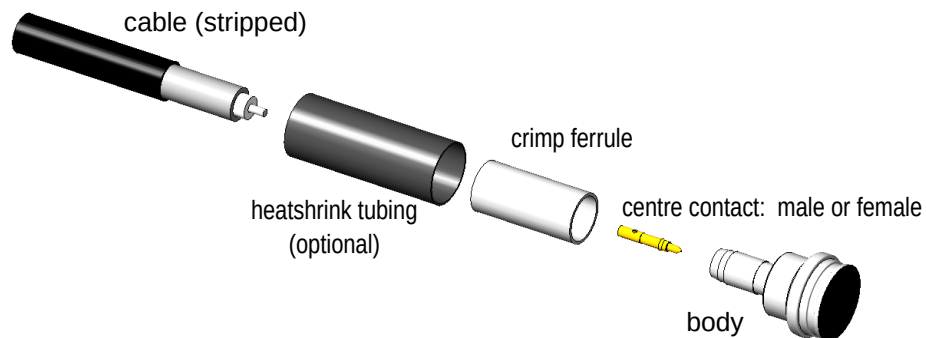


1.) Slide the crimp ferrule and the heatshrink tubing (opt.) onto the cable.

2.) Slide the centre contact on until it bottoms against the cable dielectric and solder the centre contact.

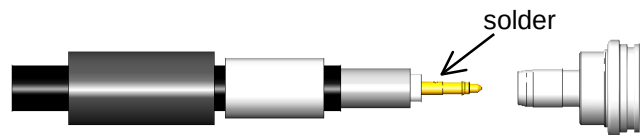

3.) Fan the braid and slide the cable into the body.



4.) Slide the ferrule over the braid.



5.) Crimp the ferrule with crimping tool.



6.) Slide the optional heatshrink tubing over the crimp ferrule and heatshrink it in place.